


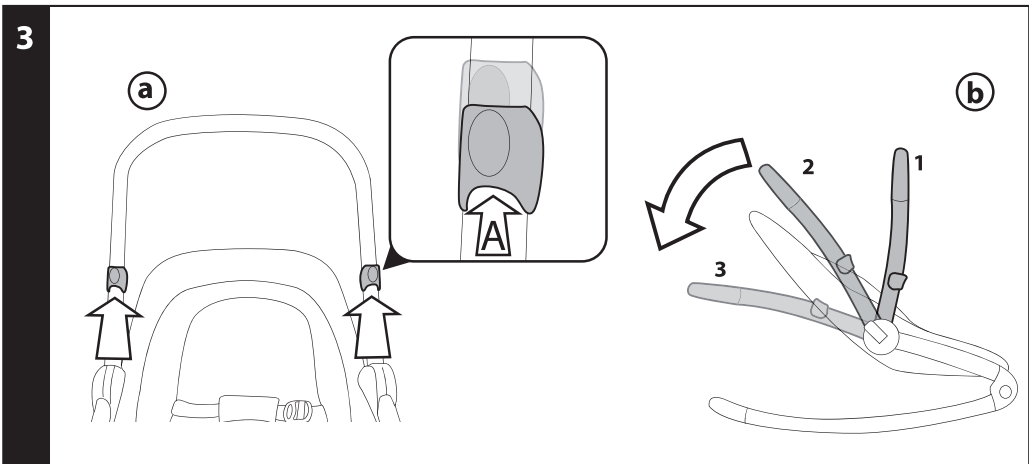
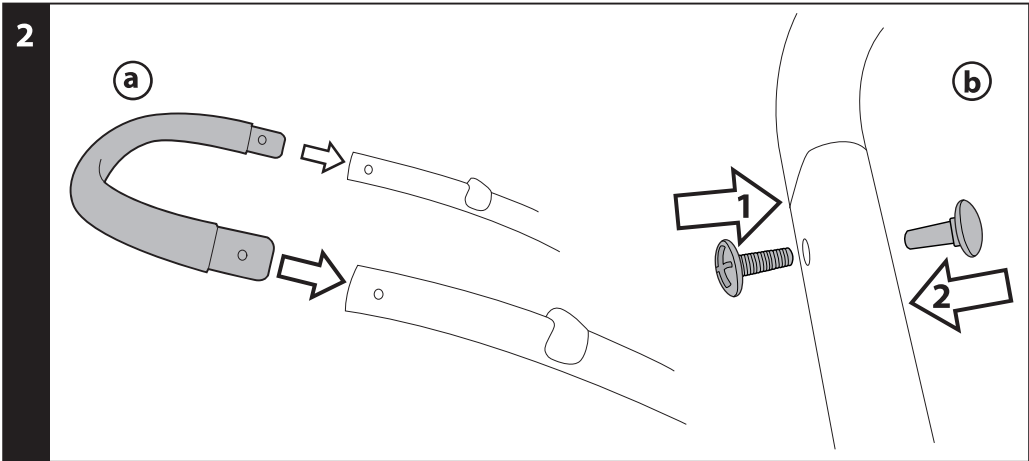
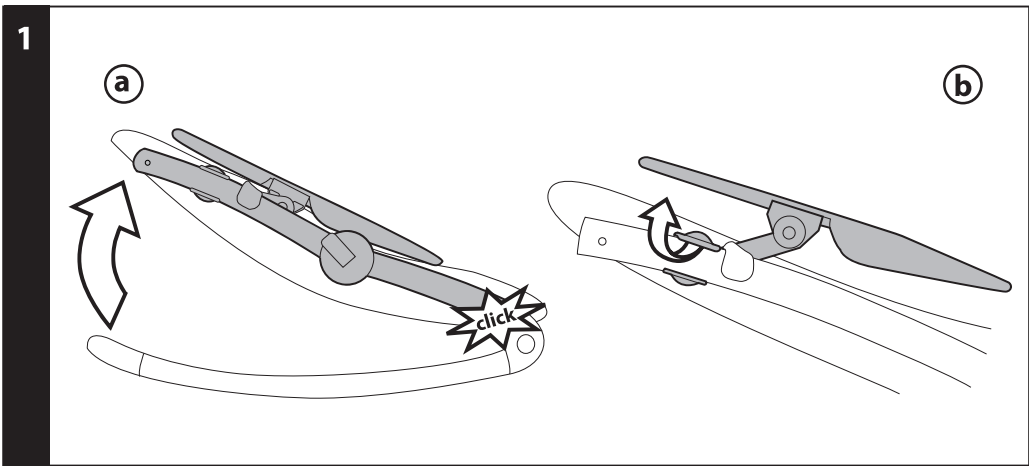




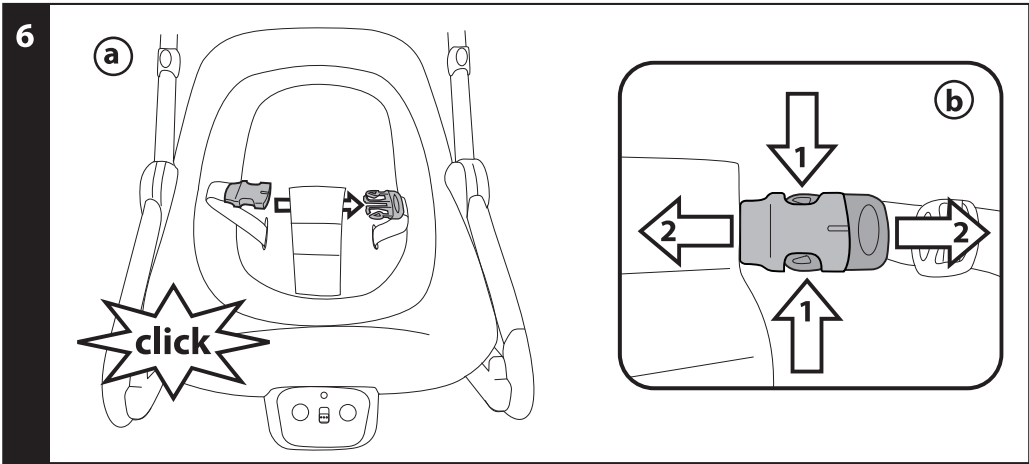


IT Istruzioni d'uso  
EN Instructions for use  
FR Notice d'emploi  
DE Gebrauchsanleitung  
ES Instrucciones de uso  
PT Instruções para uso  
NL Gebruiksaanwijzing  
DK Brugsanvisning  
FI Käyttöohjeet  
CZ Návod na použití  
SK Návod na použitie  
HU Használati útmutató  
SL Navodila za uporabo  
RU Инструкции по пользованию  
TR Kullanım klavuzu  
EL Οδηγίες χρήσεως



# sdraietta melodia

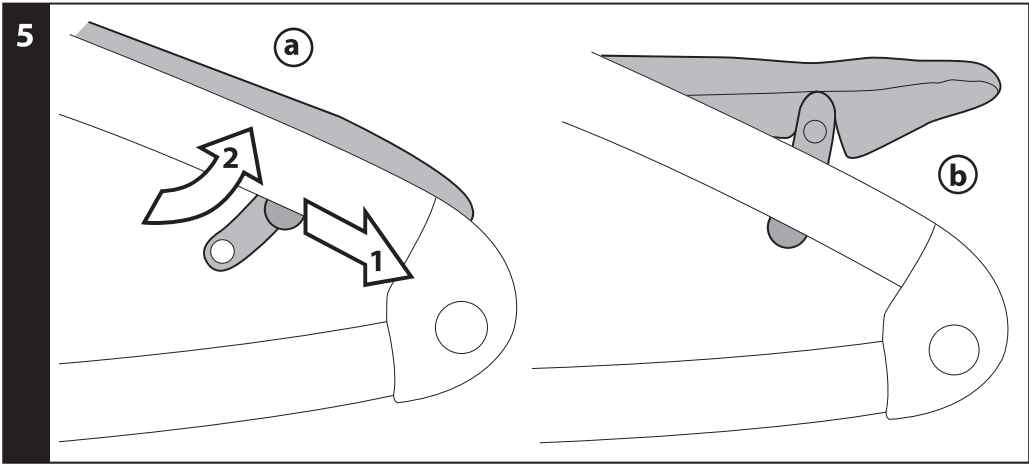



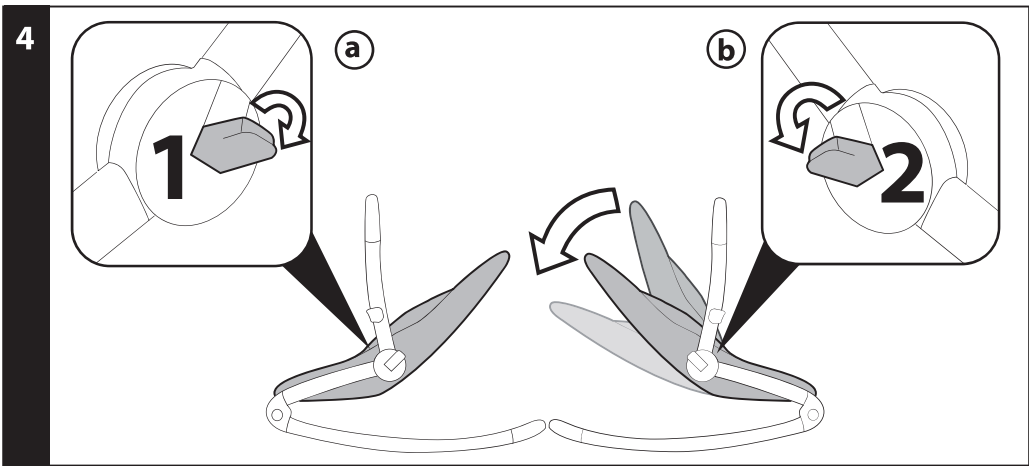


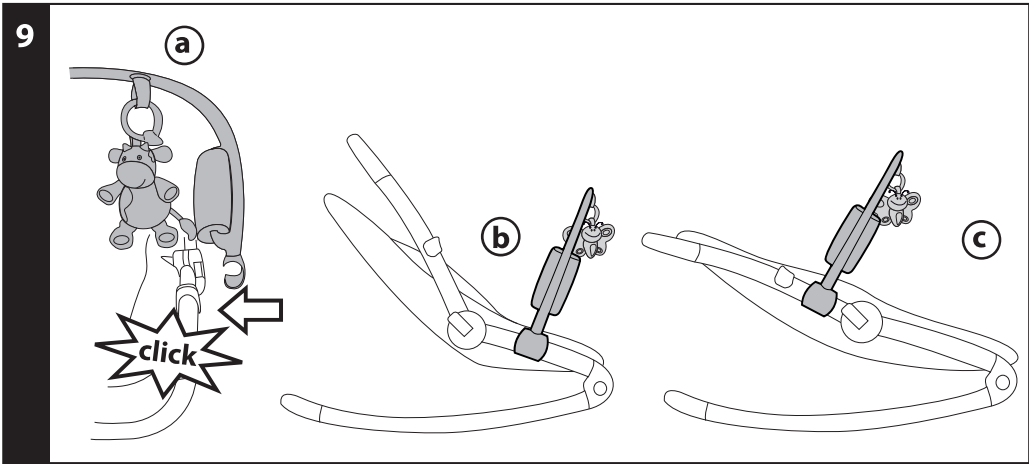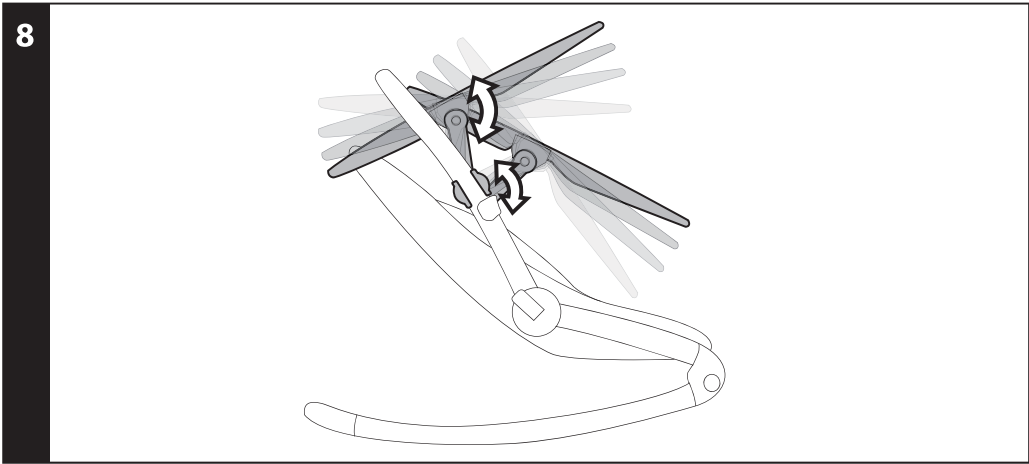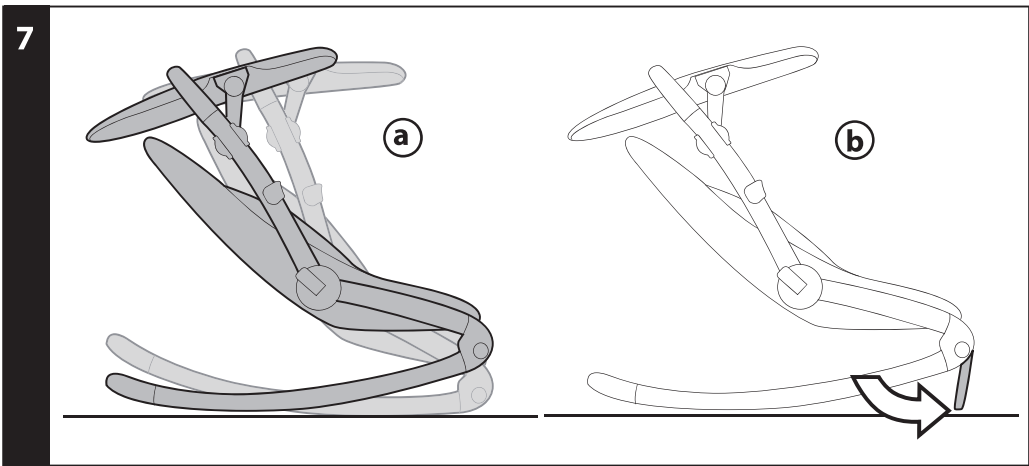



10

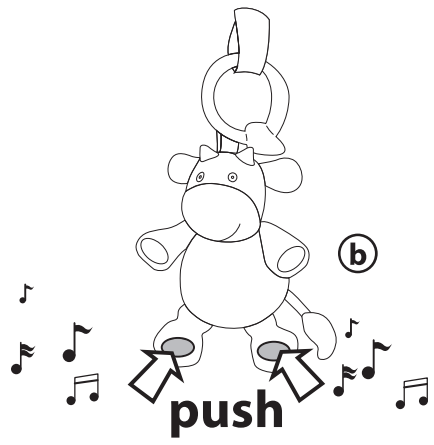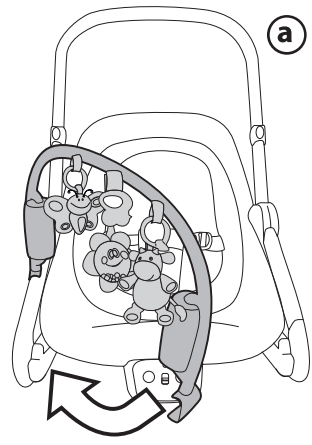


11

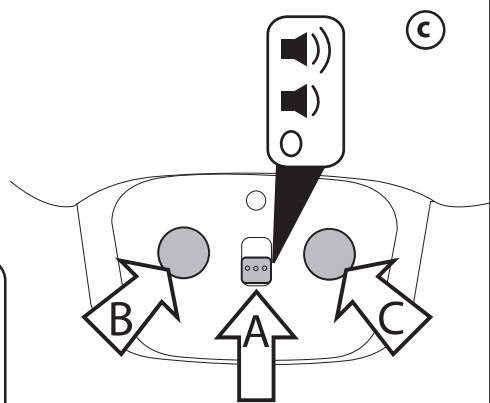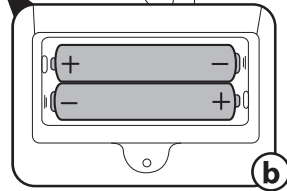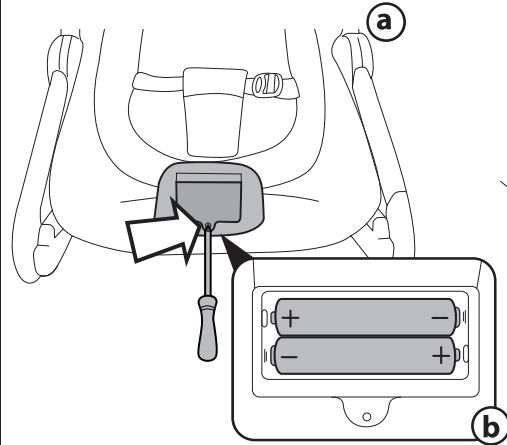


12

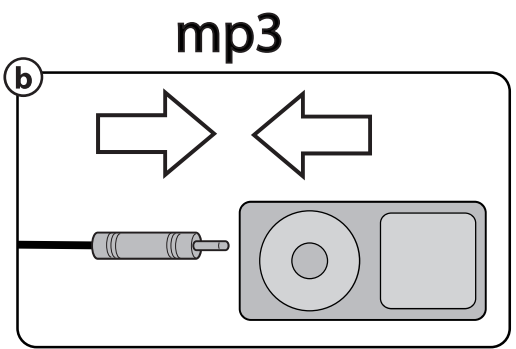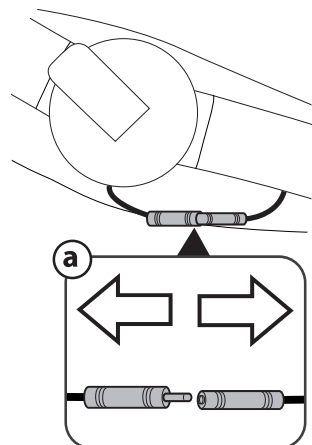


13

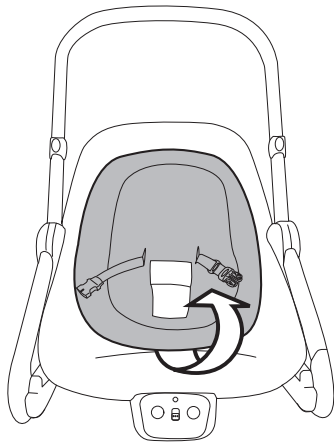


14

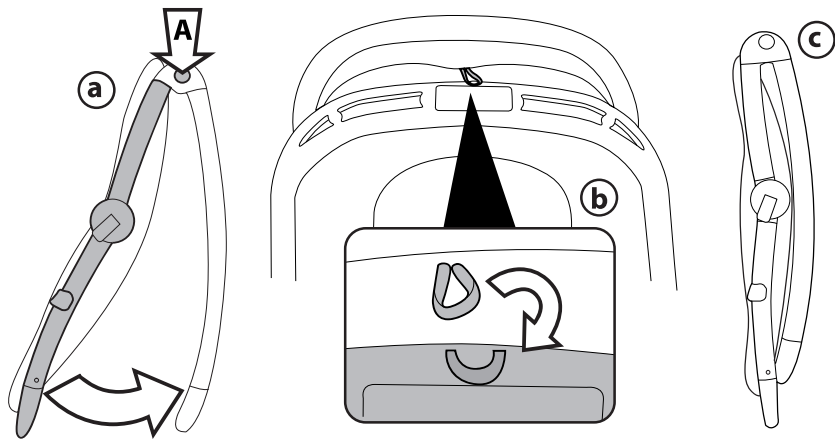


15

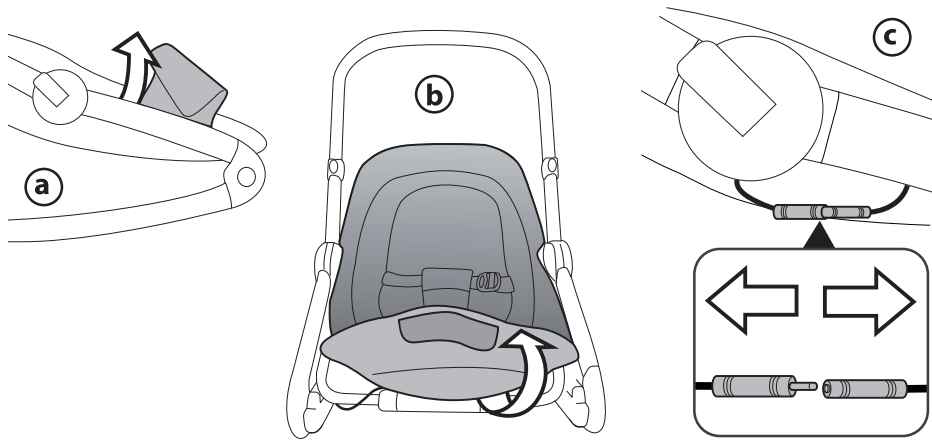

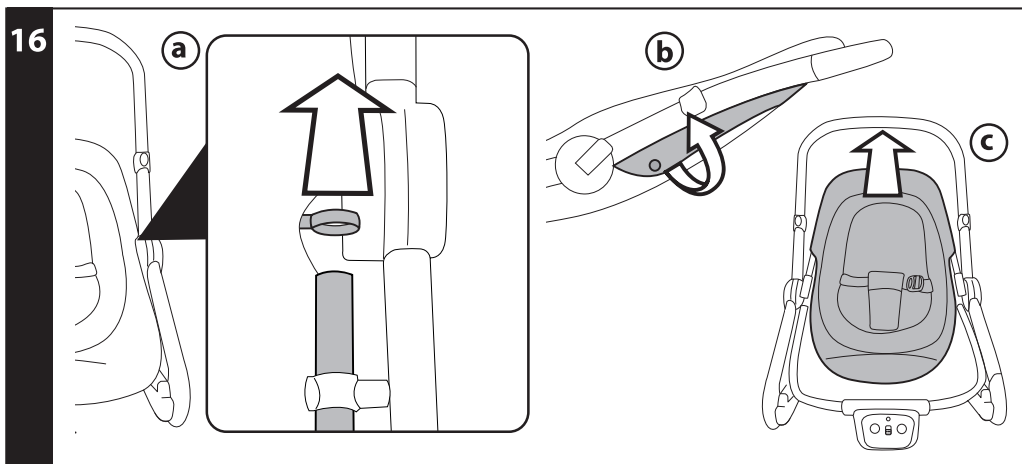

## Sdraietta Melodia

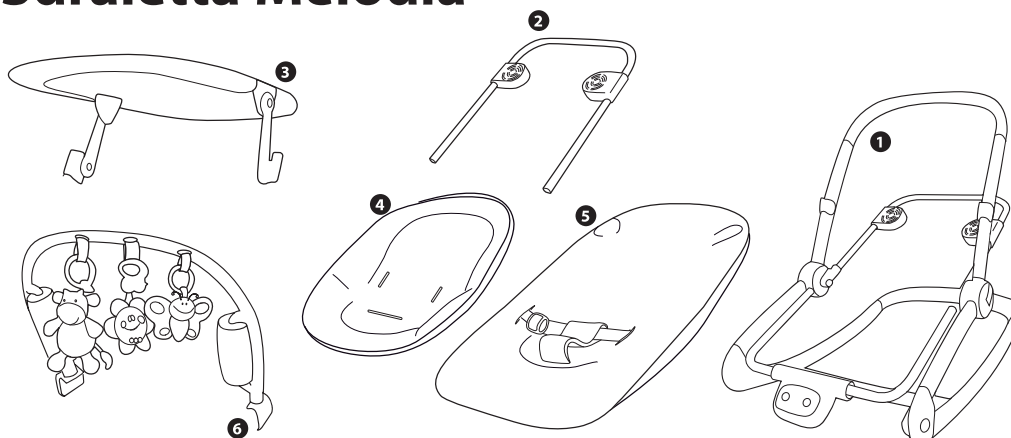

- |                |              |
|----------------|--------------|
| 1 ITSDMN00NL65 | 4 BRIMEL00•  |
| 2 ARPI0453L65N | 5 BSAMEL00•  |
| 3 BAPMEL00•    | 6 ASPI0090GR |

- IT• Ricambi disponibili in più colori da specificare nella richiesta.
- EN• Spare parts available in different colours to be specified when ordering.
- FR• Pièces de rechange disponibles en plusieurs couleurs à spécifier dans la demande.
- DE• Ersatzteile in mehr Farben vorhanden, die in der Anfrage spezifiziert werden müssen.
- ES• Repuestos disponibles en otros colores que se especificarán en el pedido.
- PT• Peças de reposição disponíveis em cores alternativas a serem especificadas no pedido.
- NL• Reserveonderdelen verkrijgbaar in meerdere kleuren, bij bestelling te specificeren.
- DK• Reservedele kan leveres i flere farver som bør specificeres ved bestillingen.
- FI• Varaosia saatavana eri värisinä: ilmoita väri tilauksessa.
- CZ• U náhradních dílů, které jsou k dispozici ve více barvách, je nutné na objednávce specifikovat příslušnou barvu.
- SK• Pri náhradných dieloch, ktoré sú k dispozícii vo viacerých farbách, je potrebné pri objednávke špecifikovať želanú farbu.
- HU• A tartalék alkatrészek különböző színekben elérhetőek, melyeket rendeléskor kell kiválasztani.
- SL• Rezervni deli so na voljo v več barvah, ki jih je treba navesti pri naročilu.
- RU• Запчасти имеются различных цветов, необходимый указать в запросе.
- TR• Siparişte belirtilen değişik renklerdeki yedek parçaları mevcuttur.
- EL• Ανταλλακτικά διαθέσιμα σε διάφορα χρώματα. Προσδιορίστε όταν παραγγείλετε.

## EN English

Thank you for choosing a Peg-Pérego product.

### **WARNING** **IMPORTANT: KEEP FOR FUTURE USE**

- **READ THESE INSTRUCTIONS CAREFULLY. FAILURE TO FOLLOW THEM MAY PUT THE CHILD'S SAFETY AT RISK.**
- THIS RECLINED CRADLE IS DESIGNED FOR CHILDREN UP TO A MAXIMUM WEIGHT OF 9 KG.
- DO NOT USE THE RECLINED CRADLE SDRAIETTA WHEN THE CHILD IS ABLE TO SIT UNAIDED.
- NEVER LEAVE CHILD UNATTENDED IN THE RECLINED CRADLE.
- THIS RECLINED CRADLE IS NOT INTENDED FOR PROLONGED PERIODS OF SLEEPING. IF THE CHILD NEEDS TO SLEEP, IT IS IMPORTANT TO PUT IT IN A SUITABLE COT.
- ALWAYS USE THE SAFETY BELTS.
- THIS RECLINED CRADLE IS NOT A CHILD CAR SEAT: NEVER USE IT FOR TRANSPORTING A CHILD IN A MOTOR VEHICLE.
- DANGER OF STRANGULATION: LEAVE CHILDREN IN THE RECLINED CRADLE WHEN THE SAFETY BELTS ARE LOOSENED OR NOT FASTENED.
- RISK OF FALLING: IT IS DANGEROUS TO USE THE RECLINED CRADLE ON A RAISED SURFACE.
- DANGER OF SUFFOCATION: THE RECLINED CRADLE CAN OVERTURN ON SOFT SURFACES AND SUFFOCATE THE CHILD. NEVER PUT THE RECLINED CRADLE ON BEDS, SOFAS OR OTHER SOFT SURFACES.
- BEFORE USE CHECK THAT ALL OF THE ATTACHMENT MECHANISMS ARE CORRECTLY ENGAGED.
- DO NOT USE THE PRODUCT IF THERE ARE MISSING OR BROKEN PARTS.
- AVOID INSERTING FINGERS INTO THE MECHANISMS.
- BE CAREFUL NOT TO HURT THE CHILD WHEN ADJUSTING THE MECHANISMS

- (HANDLE, BACKREST).
- NEVER USE THE PLAY BAR AND THE SUN CANOPY TO CARRY THE ITEM. IT MAY BE DANGEROUS TO USE ACCESSORIES NOT APPROVED BY THE MANUFACTURER.
- THE RECLINED CRADLE MUSIC SYSTEM MUST BE SWITCHED ON AND OFF BY AN ADULT.
- IF THE RECLINED CRADLE MUSIC SYSTEM IS GOING TO BE LEFT UNUSED FOR AN EXTENDED PERIOD, IT IS ADVISABLE TO REMOVE THE BATTERIES FROM THE BATTERY COMPARTMENT.
- ONLY USE BATTERIES OF THE SAME OR EQUIVALENT TYPE AS THOSE RECOMMENDED.
- INSERT THE BATTERIES WITH THE CORRECT POLARITY.
- DO NOT COMBINE USED AND NEW BATTERIES TOGETHER.
- DISCHARGED BATTERIES MUST BE REMOVED FROM THE PRODUCT.
- DO NOT SHORT CIRCUIT THE POWER SUPPLY TERMINALS.
- RECHARGEABLE BATTERIES MUST BE REMOVED FROM THE PRODUCT BEFORE RECHARGING.
- RECHARGEABLE BATTERIES MUST BE RECHARGED UNDER ADULT SUPERVISION.

#### **NOTICE:**

- THIS ARTICLE MEETS OR EXCEEDS ALL REQUIREMENTS COVERED IN ASTM F2050 STANDARD AND LATEST REVISIONS.

#### **WEEE DIRECTIVE (EU only)**

- At the end of its useful life, this product is classed as Waste Electrical and Electronic Equipment (WEEE) and must therefore not be disposed of as urban waste but instead must be taken to a designated separated waste collection facility.
- Take the refuse to the relevant designated collection facility.
- The presence of dangerous substances contained in the electrical components of this product represents a potential source of danger for human health and for the environment if the product is not correctly disposed of.
- The barred dustbin indicates that the

product must be subject to sorted waste collection.



## INSTRUCTIONS

- 1 OPENING: to open the baby rocker, rotate the frame bars forwards until they click (fig\_a) and release the sun canopy from the handle (fig\_b).
- 2 ASSEMBLING THE BABY ROCKER: to fit the handle, move the backrest into the vertical position (see point 4). Slot the handle into the tubes (fig\_a) and fasten it in place with a screwdriver, ensuring that the crosshead screw is on the outside of the handle (fig\_b). Tighten well and periodically check that it is fixed properly.
- 3 ADJUSTING THE HANDLE: the handle can be set in 3 different positions. Push the two levers (fig\_a) in the direction of the arrows and at the same time rotate the handle into the required position (fig\_b).  
**The transport position is number 1.**
- 4 ADJUSTING THE BACKREST: The backrest can be set in 3 different positions. Rotate lever 1 outwards (leaving it in the open position) (fig\_a), rotate lever 2 outwards and at the same time adjust the backrest (fig\_b). Once in the selected position, remember to close lever 1 again.
- 5 ADJUSTING THE REAR LEDGE: the rear ledge can be set at two different heights. To raise it, pull the two levers outwards from both sides and at the same time push the tabs upwards (fig\_a). Rear ledge raised (fig\_b).
- 6 SAFETY BELT: thread the safety belt through the crotch strap and engage the buckle until it clicks (fig\_a). To release the safety belt, press the two sides of the buckle and simultaneously pull the waist strap outwards (fig\_b).
- 7 STAND: the base of the baby rocker can be rocking (fig\_a) or stable. To stop it from rocking, rotate the stabilizer stand outwards (fig\_b).
- 8 SUN CANOPY: the baby rocker has a sun canopy that can be placed in different positions. It attaches to the handle at any height.
- 9 PLAY BAR: attach the play bar (fig\_a). It can be fitted to the front of the frame (fig\_b) or to the handle (fig\_c), depending on the position of the backrest.
- 10 The play bar can be detached on one side only, and rotated externally. To make the cow moo, press its hooves (fig\_b).
- 11 SOUND MODULE: **batteries are NOT included.** The sound module requires 2 "penlight" type AA 1.5V batteries. Use a screwdriver to unscrew the battery compartment cover (fig\_a), insert the batteries. (fig\_b), and then screw the cover back on. The sound module has 2 volume settings and 8 music options (fig\_c).  
A: To switch on the sound module and to adjust the volume, move the button upwards.  
B: 4 playful tunes.  
C: 4 soothing tunes.  
To change the music, push the relevant buttons.
- 12 MP3: The baby rocker can reproduce music from the most powerful MP3 players. Disconnect the plug and socket on the sound unit (fig\_a) and connect the male plug to your MP3 player.
- 13 BOOSTER CUSHION: the baby rocker comes with a booster cushion for newborn infants which can be removed when the child gets bigger. To remove the booster, unthread the crotch strap.
- 14 CLOSING: to close the baby rocker (fig\_a), put the handle and the back rest in the lowest position, press button A on both sides at the same time and pull together as in the figure. Before moving the closed baby rocker, put the elastic loop around the fastener (fig\_b). When closed, the baby rocker is extremely

compact and takes up very little space (fig\_c).

- 15 REMOVING COVERS: to remove the cover of the baby rocker, detach the Velcro (fig\_a), slip off the sound module cover by moving it towards the front (fig\_b), then disconnect the sound module connector by detaching the two jacks (fig\_c).
- 16 Slip the cover side loop off the frame tubes (fig\_a), unbutton the back of the backrest (fig\_b) and slide the cover upwards (fig\_c). Important: when re-covering the baby rocker remember to insert the loop onto the tubular frame.

## CLEANING AND MAINTENANCE

**PRODUCT MAINTENANCE:** protect from the weather: water, rain, or snow; prolonged and continuous exposure to bright sunlight may give rise to colour changes of various different materials; store this product in a dry place.

**CLEANING THE CHASSIS:** periodically clean all plastic parts with a damp cloth. Do not use solvent or similar cleaning products; keep all metal parts dry to prevent rusting; keep moving parts clean (adjustment mechanisms, locking mechanisms) and free of dust and sand and, if necessary, lubricate with light machine oil.

**CLEANING FABRIC PARTS:** brush fabric parts to remove dust and wash by hand at a maximum temperature of 30°C; do not wring; do not use chlorine bleach, do not iron; do not dry clean; do not apply solvent-based stain removers and do not dry in a tumble dryer.



## PEG-PÉREGO S.p.A.



Peg-Pérego S.p.A. is an ISO 9001 certified company. This certification is a guarantee for customers and consumers of the transparency and trustworthiness of the company's procedures and working methods.

Peg Pérego can make changes at any time to the models described in this publication for technical or commercial reasons.

Peg Pérego is at the disposal of its customers and consumers to ensure that all their demands and queries are fully satisfied. It is a key part of our policy to ensure we are always aware of our customers' views and requirements. We would therefore be very grateful if, after using a Peg Pérego product, you take the time to fill in our CUSTOMER SATISFACTION QUESTIONNAIRE, making a note of any comments or suggestions you might have. You can find the questionnaire on the Peg Pérego website: [www.pegperego.com](http://www.pegperego.com)

## PEG-PÉREGO AFTER-SALES SERVICE

If any parts of your Peg Pérego product should be accidentally mislaid or damaged, use exclusively genuine original Peg Pérego replacements. For any repairs, replacements, product information, and orders for genuine original replacement parts and accessories, contact Peg Pérego After-Sales Service:

tel. 0039/039/60.88.213 fax 0039/039/33.09.992  
e-mail [assistenza@pegperego.it](mailto:assistenza@pegperego.it) website [www.pegperego.com](http://www.pegperego.com)

This document was created with Win2PDF available at <http://www.win2pdf.com>.  
The unregistered version of Win2PDF is for evaluation or non-commercial use only.  
This page will not be added after purchasing Win2PDF.